

Backlit Potenza ST remote control setup

TV programming Feature

1. Press and release <TV> twice
2. Press and hold <Setup> until you get 2 blinks
3. Enter the 4 digit code from the list below.
4. All lights should be out on the remote - at this point test power on and off, volume up and down, and mute on and off.

Master Power Feature

1. Press and release <STB>
2. Press and hold <Setup> until you get 2 blinks
3. Press <9 9 5>
4. Press <Power>
5. Press <STB> <TV>
6. Press and hold <Setup> until you get 2 blinks

~~To Clear the Master Power Macro~~

~~To clear Master Power and start over:~~

- ~~1. Press and hold <Setup> until you get 2 blinks~~
- ~~2. Press <9 9 5>~~
- ~~3. Press <Power>~~
- ~~4. Press and hold <Setup> until you get 2 blinks~~

Global Channel Control Lock (to a Source mode) - **** now required ****

1. Press and hold <Setup> until you get 2 blinks
2. Press <9 7 3>
3. Press <Ch+>
4. Press <STB>

Setup Codes For Television

Acer	1339
Admiral	0093, 0463
Advent	1570
Affinity	3716, 3717
Aiko	0092
Aiwa	1362
Akai	0812, 0702, 1675, 0765, 1385
America Action	0180

Anam	0180
AOC	1589, 2087, 1365, 1590, 2014, 2479, 3707, 3720
Aomni	1623
Apex Digital	2397, 0748, 0879, 0765, 1217
Astar	1548, 1738
Asus	3340
Audiovox	1564, 0451, 0180, 0092, 1276, 1766, 1769, 1865, 1868, 2121, 2413, 3065
Auria	2087, 2277
Aventura	0171
Bell & Howell	0154
Berkshire	0047
Bradford	0180
Broksonic	0463, 1938
Candle	0056
Carver	0054
Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Citizen	0060, 0092, 0056
Clarion	0180
Coby	3478, 3627, 2315, 2344, 2306, 2314, 2326, 2338, 2340, 2345, 2347, 2348, 2560, 3629, 1538
Commercial Solutions	1447, 0047
Concerto	0056
Contec	0180
Craig	0180, 3423
Crosley	0054, 0000
Crown	0180
Curtis	2397, 3577, 2352, 2466, 2855, 3228, 1326
Curtis Mathes	0702, 0054, 0093, 0060, 0047, 0154, 0451, 0145, 1661, 0056, 1347, 1959
CXC	0180
Cytron	1326
Daewoo	1661, 0661, 0092, 0154, 0451
Dell	1264, 1080, 1863, 2491
Denon	0145
Digital Lifestyles	1765
Disney	1665, 1892
Dumont	0017
Durabrand	0178, 0171, 0463, 0180, 1665
Dynex	2049, 1463, 1785, 1810, 2184
Electric Mirror	3166
Electroband	0000

Electrograph	1755, 1623
Electrohome	0463, 1570, 1670
Element	1886, 1687, 2183, 2964, 3559
Elite	1457
Emerson	1864, 1394, 1886, 0171, 0178, 0154, 0451, 0463, 0180, 1661, 1665, 1913, 1944, 1963, 2183, 2776, 3559
Emprex	1765
Envision	1589, 2087, 1365, 2014
Epson	1122
ESA	0812, 0171, 1944, 1963
Fisher	0154, 1362
Fluid	2964
Fujitsu	0809
Funai	0000, 0171, 0180, 1271, 1904, 1963
Futuretech	0180
Gateway	1756, 1755
GE	1447, 0178, 0047, 0051, 0451, 0765, 1347, 1547
GFM	1864, 1886, 0171, 1665, 1963
Gibraltar	0017
Go Video	1823, 1831
GoldStar	0178, 0056
GPX	3196
Grunpy	0180
Haier	1753, 1749, 2309, 1748, 3382, 1570, 2293
Hallmark	0178
Hannspree	1348, 1351, 2786
Harley Davidson	1904
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Hello Kitty	0451, 2776
Hewlett Packard	1642
Hisense	3519, 2183, 0748, 1314, 1660, 2098
Hitachi	1643, 0145, 1145, 0056, 0679, 1576, 1904, 2756
iLo	1394, 1463, 1286, 1665, 1684, 1990
Infinity	0054
Initial	1990
Insignia	2049, 1641, 1326, 1564, 1423, 2002, 1785, 1892, 2184, 2417, 2751, 0171, 0463, 2088, 1963, 1660, 1517, 1385
Inteq	0017
iSymphony	3094, 3118, 3382
JBL	0054
JCB	0000
JCM	2256
Jensen	1326, 2541